

ANALOGUE RADIO-CONTROLLED WALL CLOCK

Dear customer,

Congratulations on purchasing your new radio-controlled wall clock. Please read these operating instructions carefully before using your unit.

OPERATING INSTRUCTIONS

Starting the clock

Remove the locking pin (S – see illustration) before inserting the battery. Insert a 1.5 V AA battery into the battery compartment of the clock unit. The clock hands will move to 12 o'clock and stop. Your clock will now start trying to pick up the DCF77 radio signal. This can take 3–10 minutes. On picking up the signal, the hands will automatically move to the correct time.

If the clock fails to pick up the radio signal, it will try again every hour. After 14 failed attempts to pick up a signal, the clock will stop trying and must be manually set. You can restart the process manually by holding down the REC button on the back of the clock for five seconds. This will stop the clock. Your clock will now automatically start trying to pick up the DCF77 radio signal again. After picking up the signal, the hands will move again to the correct time. This can take 3–10 minutes.

Manual setting mode

It is not possible to use this mode while the clock is searching for a radio signal (hands at 12 o'clock). Hold down the M.SET button on the back of the clock for five seconds. The clock will switch to manual mode.

Hold down the M.SET button to move the hands to the correct position. Press briefly to move the hands in one-minute increments.

Wait seven seconds without pressing M.SET for the clock to exit manual mode and for the time to continue to run normally.

SOURCES OF INTERFERENCE TO RADIO SIGNAL RECEPTION

The DCF77 radio signal is transmitted from near Frankfurt am Main, Germany, and can be received within an approx. 1,500 km radius of Frankfurt am Main. However, some sources of interference may considerably impede reception. Please try hanging your unit in a different location and preferably not within the vicinity of devices such as PCs, telephones, radios or TVs, which can emit electromagnetic radiation and thus interfere with DCF77 radio signal reception. Other sources of interference to radio signal reception may be thick building insulation (metal structural elements), high mountains, or static. If necessary, replace the battery. If you are unable to receive any signal at all, please set the time manually.

DISPOSAL

The wall clock is an electronic device and may not be disposed of in normal household waste. Please take the unit to an appropriate collection/waste disposal point.

BATTERIES

Please dispose of your batteries properly in the special containers provided in retail stores. Batteries do not belong in household waste.

WARRANTY/SERVICE

This product comes with a two-year guarantee. The warranty period commences on the date of purchase (receipt, proof of purchase). Within this period, we will repair any faults caused by material or manufacturing defects free of charge. The warranty does not cover damages caused by improper handling, e.g. being dropped, knocked or exposed to water.

Please return your carefully packed product to the following service address:

Sinn Spezialuhren GmbH Customer Services
Wilhelm-Fay-Straße 21
65936 Frankfurt am Main Germany

Tel. +49 (0)69 9784 14400 · Fax +49 (0)69 9784 14401
www.sinn.de/en · kundendienst@sinn.de

